



EXHAUST FAN

OPERATING INSTRUCTIONS

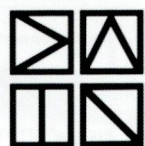

**DWELL
AIR**

**VENTILATION FAN
(INLINE FAN)**

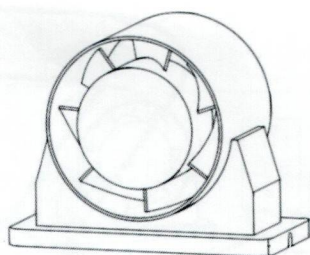


**DAIF 100 PRO
DAIF 150 PRO**

SPECIFICATIONS


Model	SIZE	Rated Voltage	Rated Frequency	Rated Power	Air Volume	Noise
DAIF 100 PRO	Φ 100	220/240V	50/60Hz	14W	80m ³ /h	33dB
DAIF 125 PRO	Φ 120	220/240V	50/60Hz	17W	150m ³ /h	35dB
DAIF 150 PRO	Φ 150	220/240V	50/60Hz	22W	250m ³ /h	37dB

PRODUCT DIMENSION


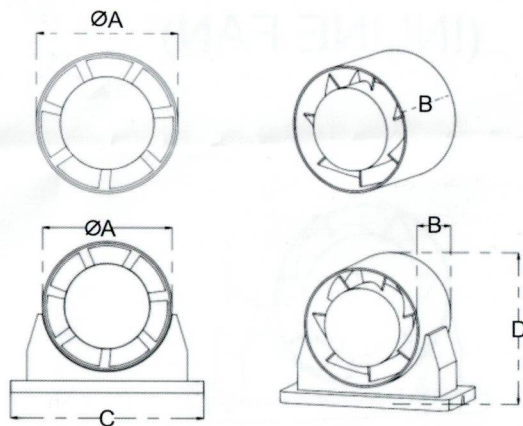


MODEL	A (mm)	B (mm)	C (mm)	D (mm)
DAIF 100 PRO	Ø97.8	87	150	114
DAIF 125 PRO	Ø 117	102	180	136
DAIF 150 PRO	Ø 146	128	222.5	167.2

 WIRING DIAGRAM



APPLICATION

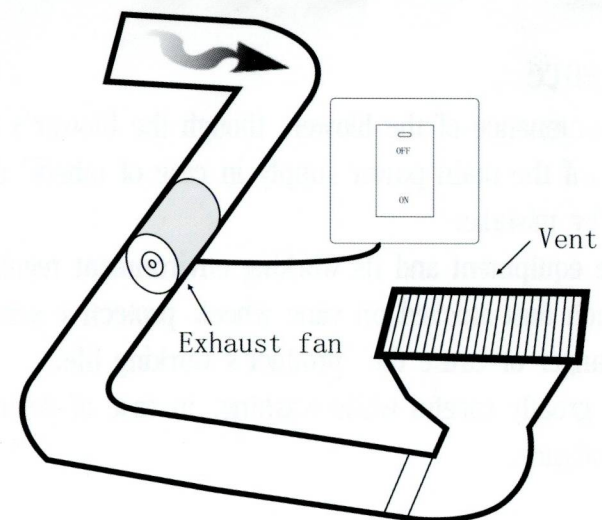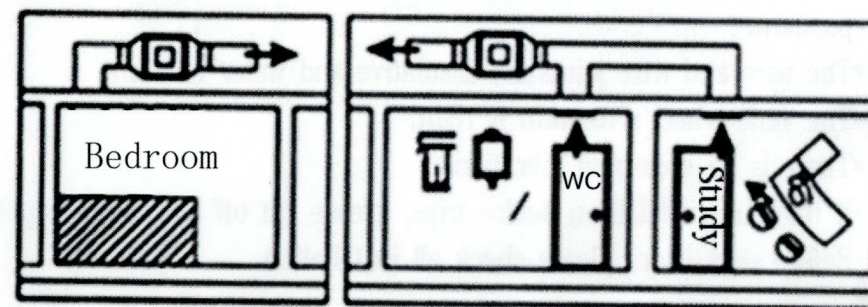

Start

- *Please confirm before start:
 - *Wiring is correct, and the equipment's wire connection is firm.
 - *Electrical safety device is connected correctly and adjusted to proper position.
 - *The wire and wire joints are insulative and water resistant.
 - *The vane wheel's rotation is right.
 - *There is no abnormal vibration.
 - *If the wire installation device trips, please cut off the power supply.
- Before start later, please check all installation.

Maintenance

- *Before maintenance of the blower, though the blower's switch is off, please cut off the main power supply in case of others' delivery of electricity by mistake.
- *Check the equipment and its working environment regularly, in case of too much dust stocked on vane wheel, protective screening, which brings danger or cause the product's working life.
- *Please be greatly careful while washing, in case of destroying vane wheel's balance.