材质: 105g铜版纸

-145 mm

CAUTIONS

- 1. This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 2. Children should be supervised to ensure that they do not play with the appliance.
- 3. The fan should be installed at 2.3m above the ground.
- 4. When the ventilating fan is connected with the power circuit, allpolarity switch with at least 3mm contact gap must be in the charging line. Green and Yellow color wire of power supply should be earthed.
- 5. Precautions must be taken to avoid the back-flow of gases into the room from the open flue of gas or other open-fire appliance.
- 6. The fan is intended for mounting in outside windows.
- 7. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 8. Ensure that the fan is switched off from the supply mains before removing the guard.
- 9. Before installation, should breathe some gumwater into the gap, which between the fan body and panel.

MAINTENANCE

- 1. Before beginning any maintenance, be sure to remove the power cord from the power source.
- 2. Never use petrol, benzene, thinner or any other chemicals for cleaning the fan.

Jjiangmen Jinling Ventilating Fan Manufacture Ltd No.1, JinlingRoad, Binjiang Avenue, Jiangmen, Guangdong, China



210 mm

Correct Disposal of this product

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

SPECIFICATIONS

Model	Size (in/mm)	Volt (V)	Freq (Hz)	Input Power (W)	Air Volume (m³/min)	Noise dB(A)
A100	4/100	220	50	4	0.9	45
A150	6/150	220	50	5	2	46

Table 1

DIMENSION (mm)



VENTILATION FAN

A100 A150

Installation and Maintenance Instructions

THESE INSTRUCTIONS MUST BE READ FULLY **BEFORE COMMENCING INSTALLATION**



Fastening ring



Model	А	В	С	D	Installation Space Ø a mm
A100	150	99	83	39	100~105
A150	200	147	93.5	39	150~155

Table 2

INSTALLATION

Step 1:Make a hole in the glass according to dimension "Øa" in Table 2.



Step 2:Remove the fastening ring from fan. Step 3:Centralize the fan body into the hole from indoor. Step 4: Put the fastening ring on the fan body from outdoor. Step 5: Fasten the fastening ring.

WIRING DIAGRAM

