

## CAUTIONS

1. This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. The fan should be installed at 2.3m above the ground.
4. When the ventilating fan is connected with the power circuit, all-polarity switch with at least 3mm contact gap must be in the charging line. Green and Yellow color wire of power supply should be earthed.
5. Precautions must be taken to avoid the back-flow of gases into the room from the open flue of gas or other open-fire appliance.
6. The fan is intended for mounting in outside windows.
7. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
8. Ensure that the fan is switched off from the supply mains before removing the guard.
9. Before installation, should breathe some gum water into the gap, which between the fan body and panel.

## MAINTENANCE

1. Before beginning any maintenance, be sure to remove the power cord from the power source.
2. Never use petrol, benzene, thinner or any other chemicals for cleaning the fan.

·Exhaust fans may adversely affect the safe operation of appliances burning gas or other fuels (including those in other rooms) due to back flow of combustion gases. These gases can potentially result in carbon monoxide poisoning. After installation of an exhaust fan such as a partition fan or a duct fan the operation of flued gas appliances should be tested by a competent person to ensure that back flow of combustion gases does not occur.

·If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



## VENTILATION FAN (EXHAUST FAN)

### FRESH R 150

## Instructions Manual


Please read the instructions carefully before use.

## SPECIFICATIONS

Model	Volt (V)	Freq (Hz)	Switch	Input Power (W)	Air Volume (m³/h)	Noise dB(A)
FRESH R 150	220	50	Low	2	30	28
			High	8	60	42

Table 1


## DIMENSION (mm)

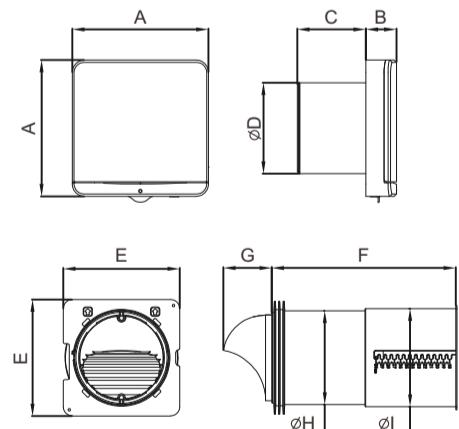

Model	A	B	C	D	E	F	G	H	I
FRESH R 150	222×222	50	112	148	190×190	180-300	79	153	160

Table 2

## WIRING DIAGRAM

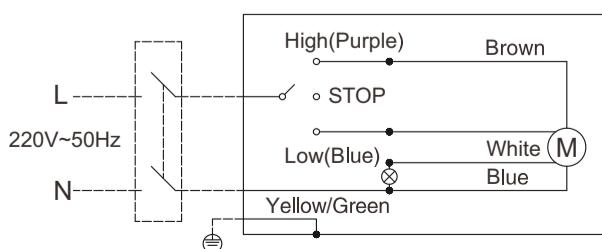

## INSTALLATION FRESH R 150

